



Proudly made by



Tetral Industries  
Christchurch, New Zealand  
Phone (03) 379 2400  
sales@tetral.co.nz

## Curved installation

We strongly recommend that wall brackets and hanger rods be fixed to a solid substrate within the wall and ceiling linings.

1. Mark fixing position for each wall bracket at required height, drill screw holes and fasten brackets to wall with large screws provided. (If installing standard U bend, allow 800mm between centres of brackets).
2. Measure from wall junction to centre of brackets to get dimensions A & B (Figure 1). Cut track to dimensions A & B.
3. Place each end of track into wall brackets and drill track through fixing hole in each bracket using 3mm drill.
4. Measure from top of track to ceiling to get hanger rod length, remove track from brackets.
5. Cut hanger rod to required length and fasten the bottom hanger fitting to track. It is recommended that the hanger rod is fitted as close as possible to the middle of the track span where suitable ceiling fixing is available.
6. Place glides in track and place track back into the wall brackets. If curtain is to be anchored at one end, pass one glide through hole in wall bracket (Figure 2). Fasten track to wall brackets with small grub screws provided.
7. Place hanger rod into bottom fitting and position top hanger fitting against the ceiling, drill screw holes then screw in place with remaining large screws provided.
8. Drill hanger rod through bottom fitting with 3mm drill and fasten with small grub screws provided (Figure 3).

# Curved

# mactrac

## shower curtain set




### FITTINGS FOR CURVED SET

Includes 18 glides

Towel hanger hooks attached to every track  
Unique Design · Holds Curtain · Reduces Splashing

FIG. 1

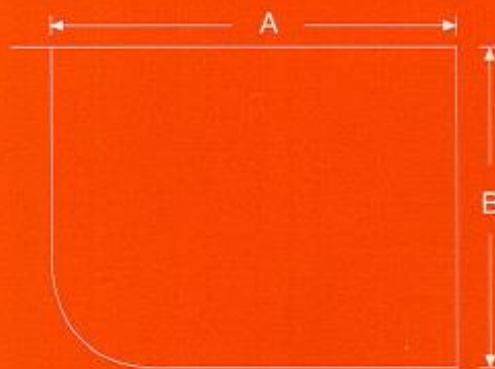

Top hanger fitting



Wall bracket

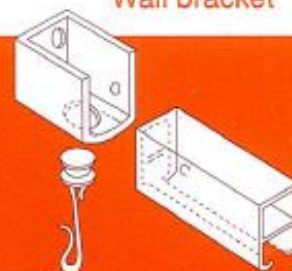


FIG. 2

Bottom hanger fitting



FIG. 3